

# RETRO RADIO

★ ★ ★ MUSICALLY YOURS ★ ★ ★

Model No.: iG-1111



## Information Before Using

1. Place RetroRadio in well ventilated position, and make sure to leave 10 cms space between it and the surroundings.
2. Don't use any oil, solvent, volatile liquid or chemical to clean the radio and recorder. Avoid high temperature (over 60 Centigrade) or too low temperature.
3. When pulling out the plug from AC socket, please hold the socket rather than just pulling the AC cord to avoid any internal wire damage. Cut off the electricity before cleaning the radio.
4. Place RetroRadio in stable and flat level position.
5. Do not place anything on the top of unit.

## Warning

1. All the voltage must comply with specification required to hear.
2. Any higher or lower voltage will damage the radio, which does not fall in the replacement terms.

## Function Selection



FM  
Radio



AM  
& SW



MP3  
Player



8 Watts  
Speaker



USB  
Plug & Play



Rechargeable  
Battery



Bluetooth  
5.0



TF/SD  
Card



Portable



Torch  
Light

## Accessories

Carrying  
Belt

AC Power  
cord

## Function for controls

1. Control Unit
  - Switch ON the radio by turning the Volume knob
  - When switching it on the radio switch's to bluetooth mode automatically.
  - Use tuning knob to switch between the frequencies
  - Torch button: to turn the torch ON or OFF

## Using Operation






### RADIO

1. Set the function selector for radio position, whirl the band switch to AM/FM/SW.
2. Tune-in the desired station by turning the knob.
3. Volume is adjusted with VOL- (NEXT (symbol of next) and VOL+/PREV (previous icon)) (VOLUME knob) to desired sound level.
4. Antenna
  - For FM, SW reception a telescopic antenna is provided. Extend this antenna fully and rotate it to find the best possible reception.
  - For AM reception a Ferrite antenna has been built-in. This antenna is also direction oriented and is recommended to rotate rotate the Radio.

### BLUETOOTH

1. For bluetooth mode set the function selector to BT/MP3 position
2. Search for pairing name: iGear RetroRadio.

## MP3:

- Set the function selector to MP3 position.
- Insert USB/ SD to play automatically.
- Press NEXT/ F.F  and PREV/REW  button to choose desired songs.
- Long press NEXT/F. F  and PREV/REW  button to FF and REW the song.
- Volume is adjusted by turning the volume knob left/right.
- Use  button to switch between pendrive and TF card.